



## 5 Familiarise yourself with the tap connections


Boiling,  
Boiling chilled,  
Chilled

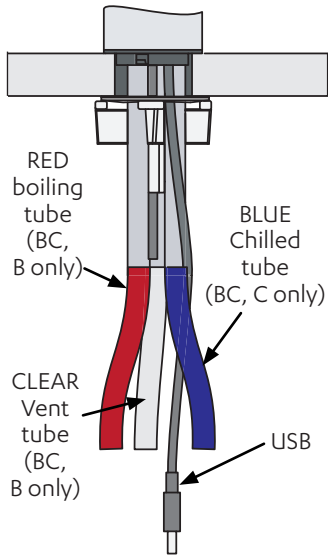


Chilled sparkling

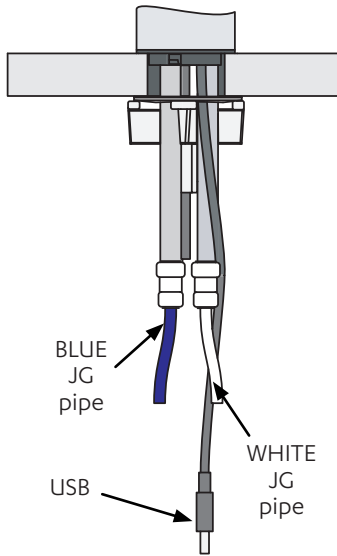

Boiling  
chilled sparkling

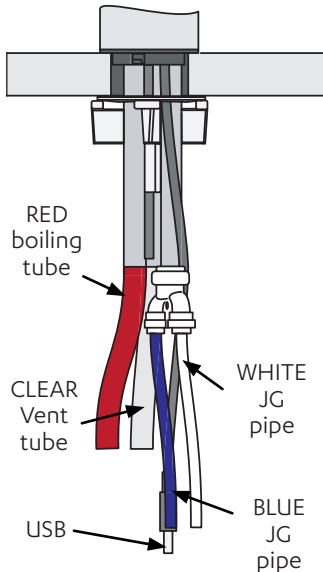

Boiling  
ambient

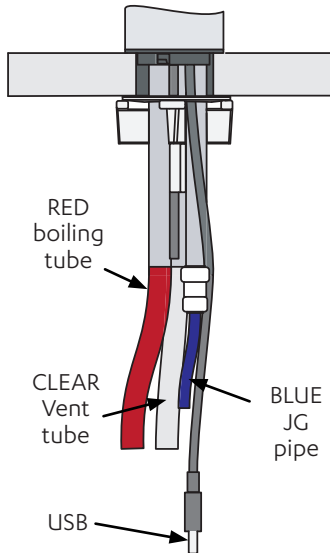

## 6 Command Centre connections

<b>USB</b>	Connected to the Tap.
<b>Boiling out</b>	Red silicone tube from tap. Cut to length.
<b>Chilled out</b>	(BC, C) Blue silicone tube from tap, (BCS, CS) Blue JG pipe from tap. Cut to length.
<b>Vent</b>	Clear silicone tube from tap. Cut to length.
<b>Sparkling out</b>	White JG pipe from tap. Cut to length.
<b>Ambient out</b>	Blue JG pipe from tap. Cut to length.

## 7 Cleaning and general maintenance

- Wipe surfaces with a damp cloth and then wipe dry with a clean, dry cloth.



### IMPORTANT - For Touch-Free Wave Tap:

- Do not use air-drying disinfectant sprays.
- Do not use abrasives to clean the sensor lenses at the sides, top and rear of the Touch-Free Wave Tap.
- This could cause permanent malfunction and void warranty.

Installation instructions


# Zenith HydroTap



Wave, Elite, Classic Plus, Classic  
B, BA, BC, BCS, CS, C



**Zenith Heaters Limited**  
IRD/GST No. 95 640 729  
18 Kawakawa Place,  
Westgate, Auckland 0814  
New Zealand  
Ph +(64 9) 838 8612  
Free Call 0800 558 055  
[zenithwater.co.nz](http://zenithwater.co.nz)

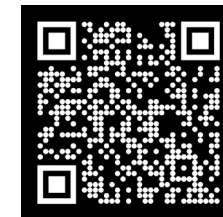

Visit our website to  
download the manuals

## Using these instructions

Please refer to all safety and installation requirements detailed in the Quick start guide provided with the HydroTap Command Centre, and HydroTap Command Centre installation instructions found online, prior to installation of, or any change to, the complete system.



**WARNING**



Read the instructions

Before commencing the installation, download & read the HydroTap Command Centre installation instructions

## Tools needed for tap installation

In addition to normal tools, the following (or equivalent equipment) will be required.

- 35mm diameter sheet metal hole punch for sinks.
- 35mm diameter hole saw for worktops.
- Tube spanner for fixing the tap assembly (supplied).



Be aware of the risks of hazards which could cause harm when using tools. Assess the risks before starting the installation.


## Water supply pressure requirements

	Min - Max pressure, kPA (bar)
HydroTap	170 (1.7) - 700 (7.0)
Sparkling HydroTap	250 (2.5) - 700 (7.0)
Booster	200 (2.0) - 700 (7.0)

## 1 Positioning

Position the tap such that it dispenses into the sink bowl with clearance for a cup or tea pot.

**Wave Tap:** Observe 100mm 360° clearance envelope.

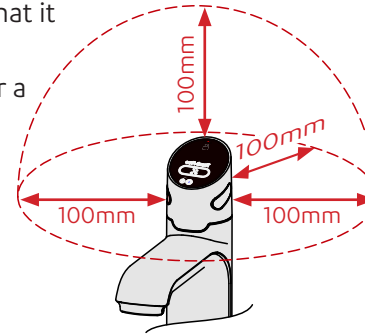


Wave clearance




Ensure that taps are positioned to minimise the risks of scalding when dispensing boiling water.

Position Command Centre and Tap as close together as possible. See below.

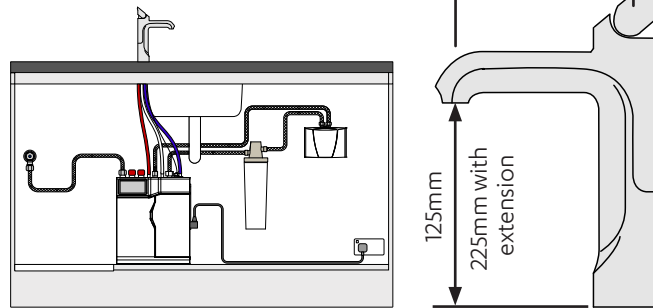


## 2 Cut the hole & fit the spacer

- Cut a Ø35mm hole in the worktop / sink.
- Apply a light smearing of silicone sealant on the underside of the spacer to ensure a watertight fit.

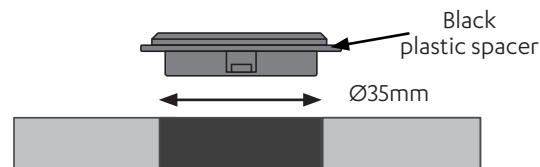

## 3 Mount the tap

Pass the tubes and USB cable through the Ø35mm hole.

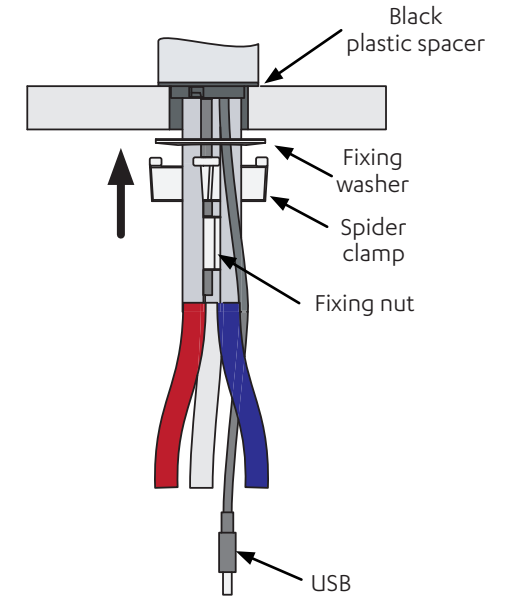

## 4 Secure the tap

Use a tube spanner to secure the tap in place.

