




56 SERIES PLUGS AND CONNECTORS

Wiring instructions for
56P's, 56PA's and 56CR's

ASSEMBLY DETAILS

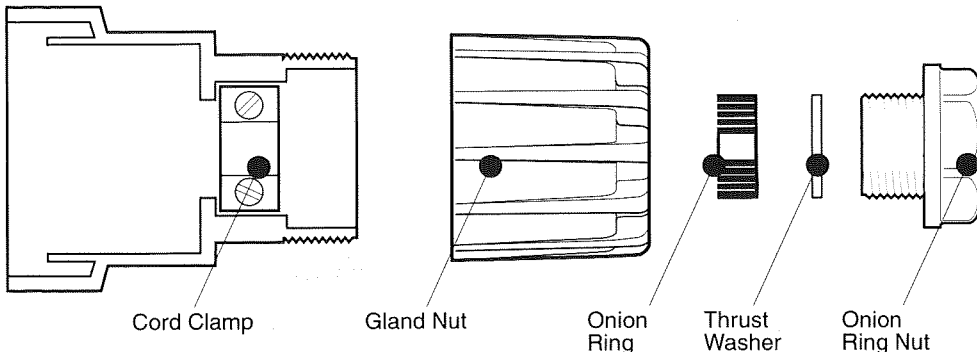


SELECTING THE GLAND SIZE

To select the optimum gland size for the recommended cable size use the following charts:


For 10A, 16A and 20A

mm ²	Number of cores				
	3	4	5	6	7
1.0	0	1	1	1	2
1.5	1	1	2	2	3
2.5	2	2	2	3	3
4.0	2	3	3		

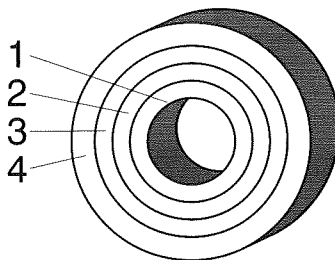

For 32A, 35A, 40A and 50A

mm ²	Number of cores		
	3	4	5
4.0	1	1	2
6.0	2	2	3
10.0	4	4	5
16.0	5	5	

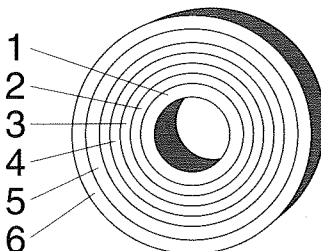


Remove all the rings up to and including the number corresponding to the selected cable size.


REMOVING THE ONION RINGS

To remove the onion rings use a knife or small pliers:

cut around the circle
with a sharp knife

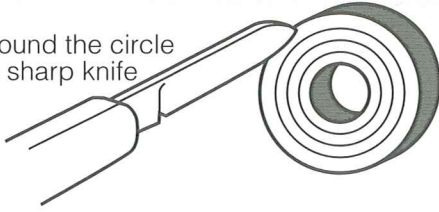


or pull and twist
to remove
selected onion
rings using
pliers.

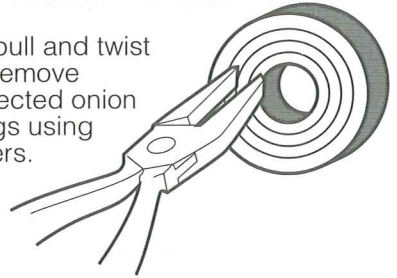

STRIPPING DETAILS FOR ALL CONDUCTORS INCLUDING EARTH


For 10A, 16A and 20A

Recommended for use with 1mm² 3 core to 4mm² 5 core ordinary duty circular flex.

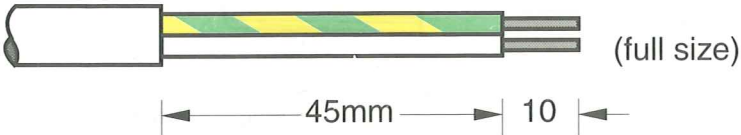


For 32A, 35A, 40A and 50A



Recommended for use with 4mm² 3 core to 16mm² 4 core ordinary duty circular flex.

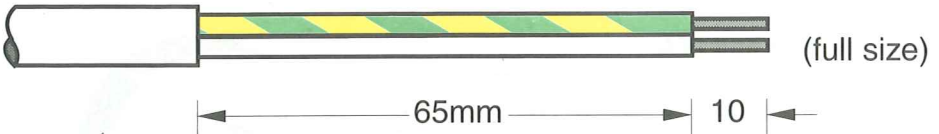


TERMINAL POSITIONS

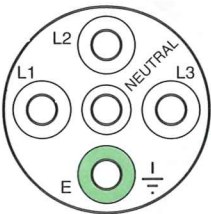

Plugs Straight (56 P's)
and angled (56PA's)

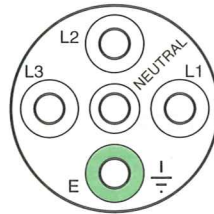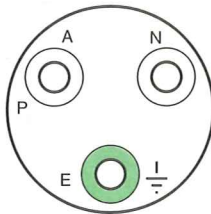

Connectors (56CR's)

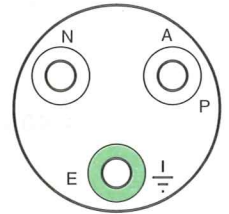

PDL INDUSTRIES LTD

Head Office: PO Box 1367, Christchurch, New Zealand
Phone: (03) 338 9059, Fax: (03) 339 9942
Auckland: Phone (09) 525 6593, Fax: (09) 525 6593
Wellington: Phone (04) 566 7494, Fax (04) 566 7484

Manufacturers of Electrical Products

PDL INDUSTRIES AUST. PTY LTD

Head Office: 19 Joseph St, Blackburn Melbourne
PO Box 1078, Victoria 3130, Australia.
Phone: 9250 1100, Fax: 9250 1199

Continuous quality is quality you trust

