



CARE & MAINTENANCE

Maintaining the Pineclad & Pinetrim XT Horizontal & Vertical Weatherboard External Cladding Systems

Regular Washing

Hume Pine recommends that at least once a year the exterior profiles and weatherboards are washed down with a mild detergent and a fine brush to remove dirt, mould, lichen, and salt deposits. Hume Pine does not recommend using a water blaster as this can damage the surface coating.

Regular Checks

These should include checking

- fixings and flashings,
- for damage to system components,
- to ensure adequate weatherboard to ground clearances, and
- to ensure that surrounding vegetation is not encroaching on the systems.

Paint Recoating

Paint finishes require recoating approximately every five to seven years or more frequently if the paint coating has been damaged. This will depend on the site-specific exposure, e.g. to atmospheric and ultraviolet conditions; the surface coating applied; and the paint supplier's recommendations.

Useful Links:

For information on the systems refer to:

- Hume Pine Pineclad and Pinetrim XT Horizontal Weatherboard External Cladding systems pass™ and Hume Pine Pineclad and Pinetrim XT Vertical Weatherboard External Cladding systems pass™
- Hume Pine Pineclad & Pinetrim XT Design & Installation Guide
- Hume Pine Pineclad & Pinetrim XT Warranty.

All relevant Hume Pine supplied technical information is available from Hume Pine at www.humepine.nz.

Pineclad Pinetrim^{XT}

CM Care and Maintenance V1 | Uncontrolled in printed format.