

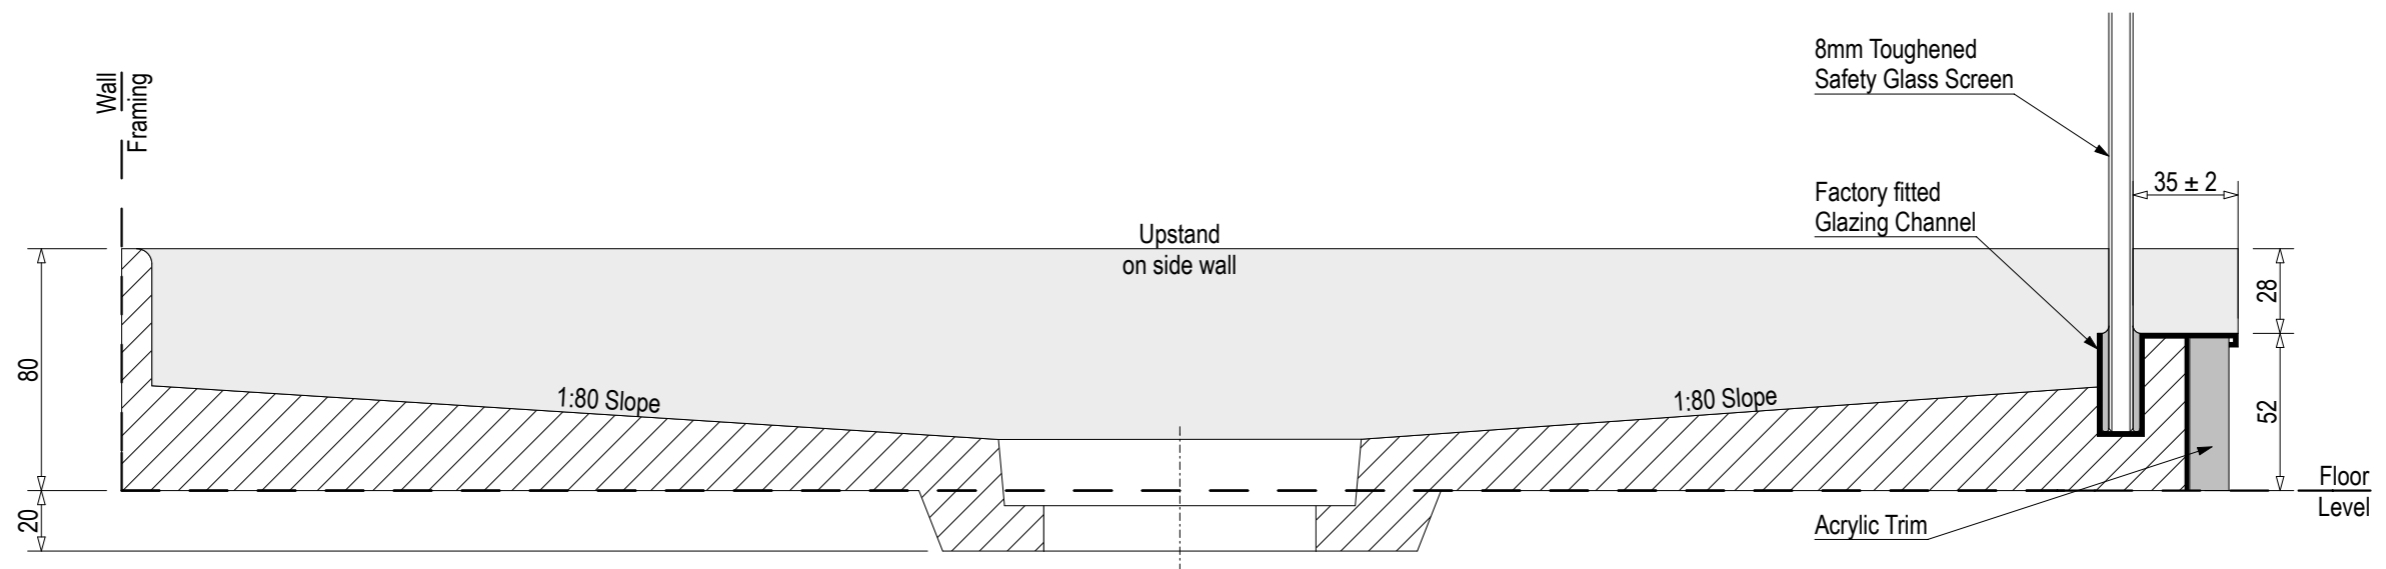


SKU: QU-MUS

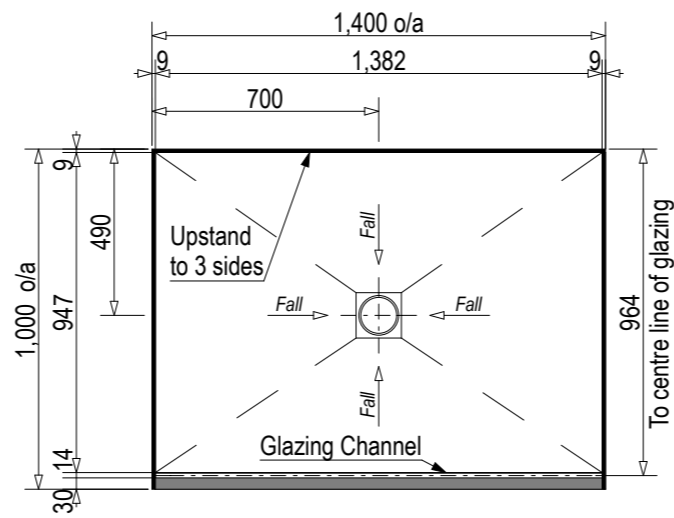

Note: Verify exact shower base dimensions on site

Screen Options:


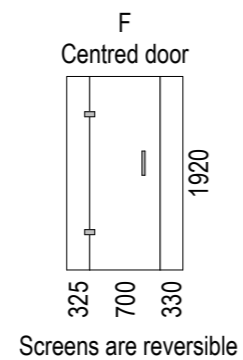


For more product information go to:

[www.atlantis.co.nz/shop/products-all/muse-1400x1000/](http://www.atlantis.co.nz/shop/products-all/muse-1400x1000/)

For installation instructions go to:

[www.atlantis.co.nz/trade/installation/](http://www.atlantis.co.nz/trade/installation/)

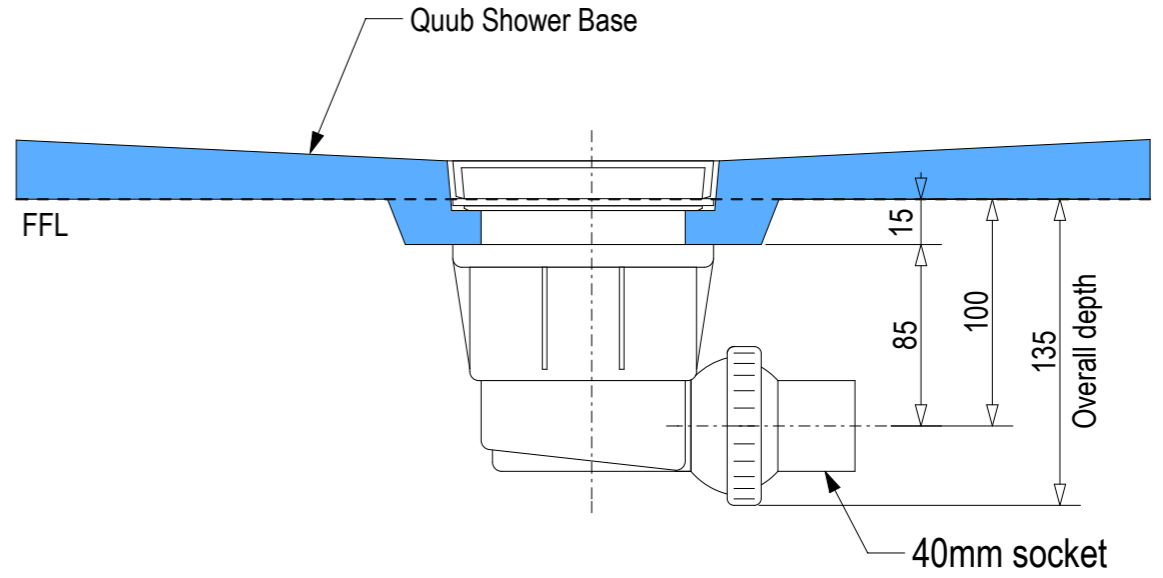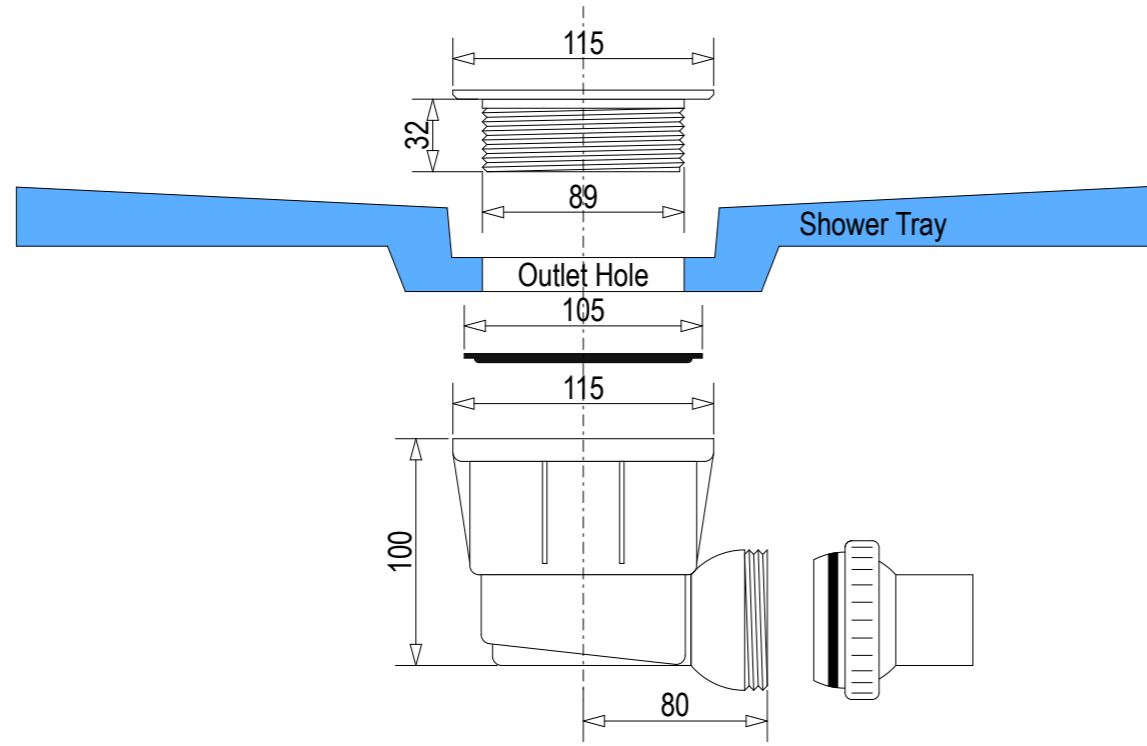

Ensure a minimum recess size of 250mm wide x 250mm long x 150mm deep for the channel drain and waste outlet

