

**EASY NICHE EXPOSED  
EN 400EX**

- 1 x Bottle of Primer 100ml .....
- 12 x 8 # 32 CSK S/S SCREWS .....


- 1 x Instructions .....
- 1 x Adhesive Trowel .....

Checked By \_\_\_\_\_  
Date \_\_\_\_\_



# TILED WALL - NON TILED EASY NICHE

## EXPOSED EASYNICHE INSTALLATION INSTRUCTIONS

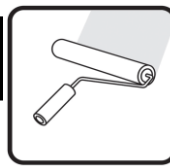

Equipment required for Installation:

- Drill
- Screwdriver
- Caulking Gun
- Small paint roller or cloth - (to apply primer)
- Knife



Fig. 1.

### Fit Niche into Wall

**STEP 1:** Measure and create extra framing to support the EasyNiche in the desired position. Ensure that screw holes line up with supporting nogs/studs. (see Fig 1). Before screwing into wall position, ensure that wallboard will finish flush with outside edge of EasyNiche flange. Pack out EasyNiche if necessary.

### Apply Connection Band

**STEP 2:** Install wallboard to finish flush with outside edge of the EasyNiche. (Fig 2.)

*As the EasyNiche is already 100% waterproof, the function of the Membrane Band is to provide a waterproof connection to the wall and to aid adhesion of tiles and supplementary waterproofing.*

**STEP 3:** Ensure EasyNiche surfaces are clean and free of dust. (clean with acetone or methylated spirits only.)

**STEP 4:** Apply primer onto wallboard around outside perimeter of EasyNiche (to approx 75mm.) and then apply primer to EasyNiche Surface(Fig 3).

**STEP 5:** Using a sharp knife, cut along the trimmed line of the Connection Sheet to fully remove the centre portion.

**STEP 6:** Starting by folding down 30mm of the backing release paper at the top edge, apply the Connection Sheet over the entire Niche face and onto the primed wall board area. Press firmly to ensure total adhesion. (Fig 4).

**STEP 7:** The Walls are now ready to be waterproofed with liquid waterproofing (supplied by others) (Fig 5).

### Apply wall waterproofing and tiles

**IMPORTANT:** CONNECTION BAND MUST BE IN PLACE BEFORE ANY WATERPROOFING OR TILES ARE APPLIED.

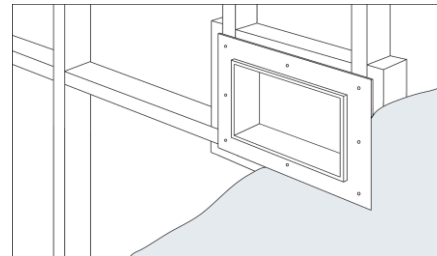


Fig. 2.

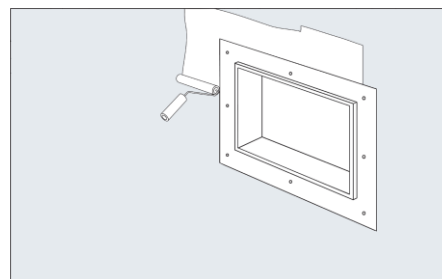


Fig. 3.

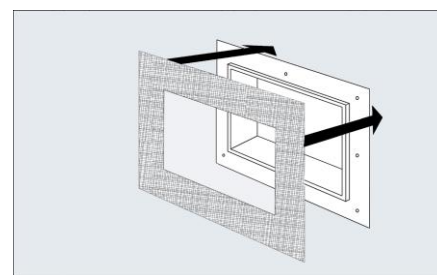


Fig. 4

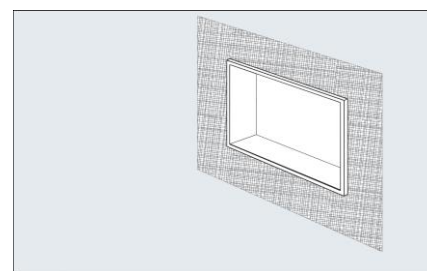


Fig. 5

## Recommended Compatible Liquid Waterproofing

- for use with Atlantis Essential Connections

Once the Atlantis Reinforcement Bands/Essential Connections have been applied to the wall and Atlantis Shower Base, the following liquid waterproofing products can be used with this system:

- BOSCOSEAL AC2 and AC3 Wet Area Membrane (ASA Bostik)
- CHEVALINE DEXX (Equus)
- DAMPFIX 2 & 3, DAMPFIX PU Wet Area Membrane (Structural Adhesives)
- DAVCO K10 PLUS Wet Area Membrane (Davco)
- DUROSET and DUROQUIK Wet Area Membrane (Waterproofing Systems)
- FLEXI-SEAL Interior Waterproofing Systems (Flexco)
- LATICRETE 9235 9237 9240 Liquid Applied Waterproofing Membranes (Laticrete)
- LIQUID FLASH 2 Waterproofing Membrane (Construction Chemicals)
- MAPEGUM WPS and MAPELASTIC Wet Area Membranes (Mapei)
- RASOLASTIK and RASOGUM Wet Area Membranes (Protective Surfaces)
- SUPERFLEX Wet Area Membrane (Ardex)
- ULTRASEAL Wet Area Membrane (ASA Bostik)
- WPM001 / WPM300 Waterproofing Membranes (Ardex)

## WARRANTY

Atlantis Bathroom Style warrants the adhesion of these products to the Reinforcement Bands, subject to correct application by a properly qualified tradesperson.