

# StormLite® Tank Information


# **New Ground Anchor Design**

New slimmer design 300mm wide for narrower trenches. Securing pegs now provided to secure pads in place to prevent pad slippage when backfilling!

You may need to use ground anchors if:


- You will have less than 350mm of cover over the top of the tank.
- Your site has ground water issues or could have after rainfall.

Please contact APD to discuss your installation and to calculate if ground anchors will be required.

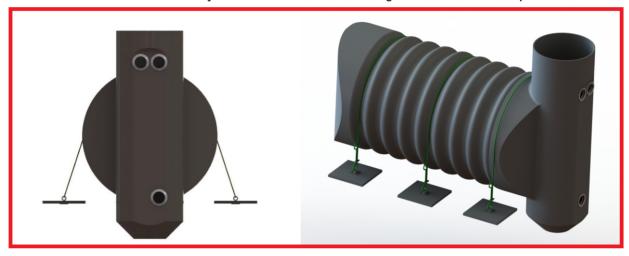

#### **Ground Anchor Installation:**

- · Anchor pads are 300mm x 500mm.
- Based on your tank buried depth / cover height and max water table level,
  APD can calculate how many ground anchors you will need.
- Ground anchors are supplied with rope attached and ready to install.
- Pegs provided to secure anchor pad in place to prevent pad slipping when backfilling. 2 pegs per pad.
- Excavation needs to be wide enough to allow for the anchor pads (Eq. 1200 diameter tank needs a minimum 1900mm wide excavation)
- Anchor pads must be placed past edge of tank as per diagram below.
  Insert pegs into holes drilled to secure pad firmly past edge of tank.
- First ground anchor rope needs to be hard against the riser.
- If the ground anchors are installed correctly as per the diagrams below, then the weight of backfill on top of the pads will stop the tank from lifting First anchor rope up during a heavy rain event or high water table issue.

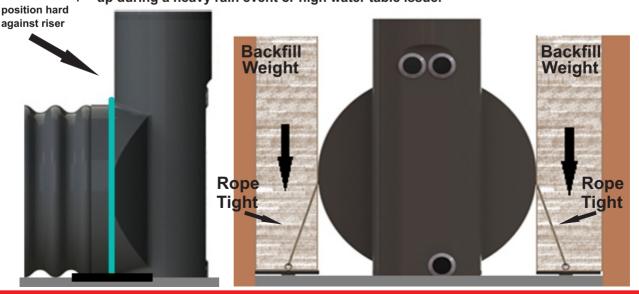

## StormLite ® Tank Information

# **New Ground Anchor Design**

New slimmer design 300mm wide for narrower trenches. Securing pegs now provided to secure pads in place to prevent pad slippage when backfilling!

### 地面固定锚的安装 (Ground Anchor Installations):

- 根据你水箱的掩埋深度,回填土高度和地下水位最高点,APD会计算你需要 多少固定锚
- 我们提供的固定锚已经连接好了绳索,可将其直接安装
- 为防止锚垫在回填时滑动,我们还会提供锚栓来固定锚垫。每片锚垫会配有 两个锚栓
- 每片锚垫尺寸为300X500mm
- 挖坑时请预留足够宽度给锚垫。1200mm直径的水箱需要1900mm直径的坑
- 锚垫一定要固定在水箱最大边缘的外侧(如右上图所示)。并且请将锚栓插入钻好的洞里,来固定锚垫在正确的位置上。(超过水箱外缘)。
- 第一对固定锚的绳索需要紧贴竖管(如左上图所示) 为了阻止水箱在大雨时或高地下水位时被浮力抬起,请按照以下图示和回填 介绍正确按装所有固定锚和回填土

Pads to be laid length ways along tank. Past the edge of tank and secured firmly with pegs supplied

