


BGC

Fibre Cement

Note 1:
BGC Duragrid™ panel vertical joint must be formed on timber batten fixed over the stud.
Note 2:
If timber studs are placed @ 400 c/c, no intermediate battens are required,

Horizontal Cavity packers, 20x70x150mm long H3.1, one central nail set to 5° fall. Keep packers 50mm clear of vertical battens.

Aluminium BGC backing strip.

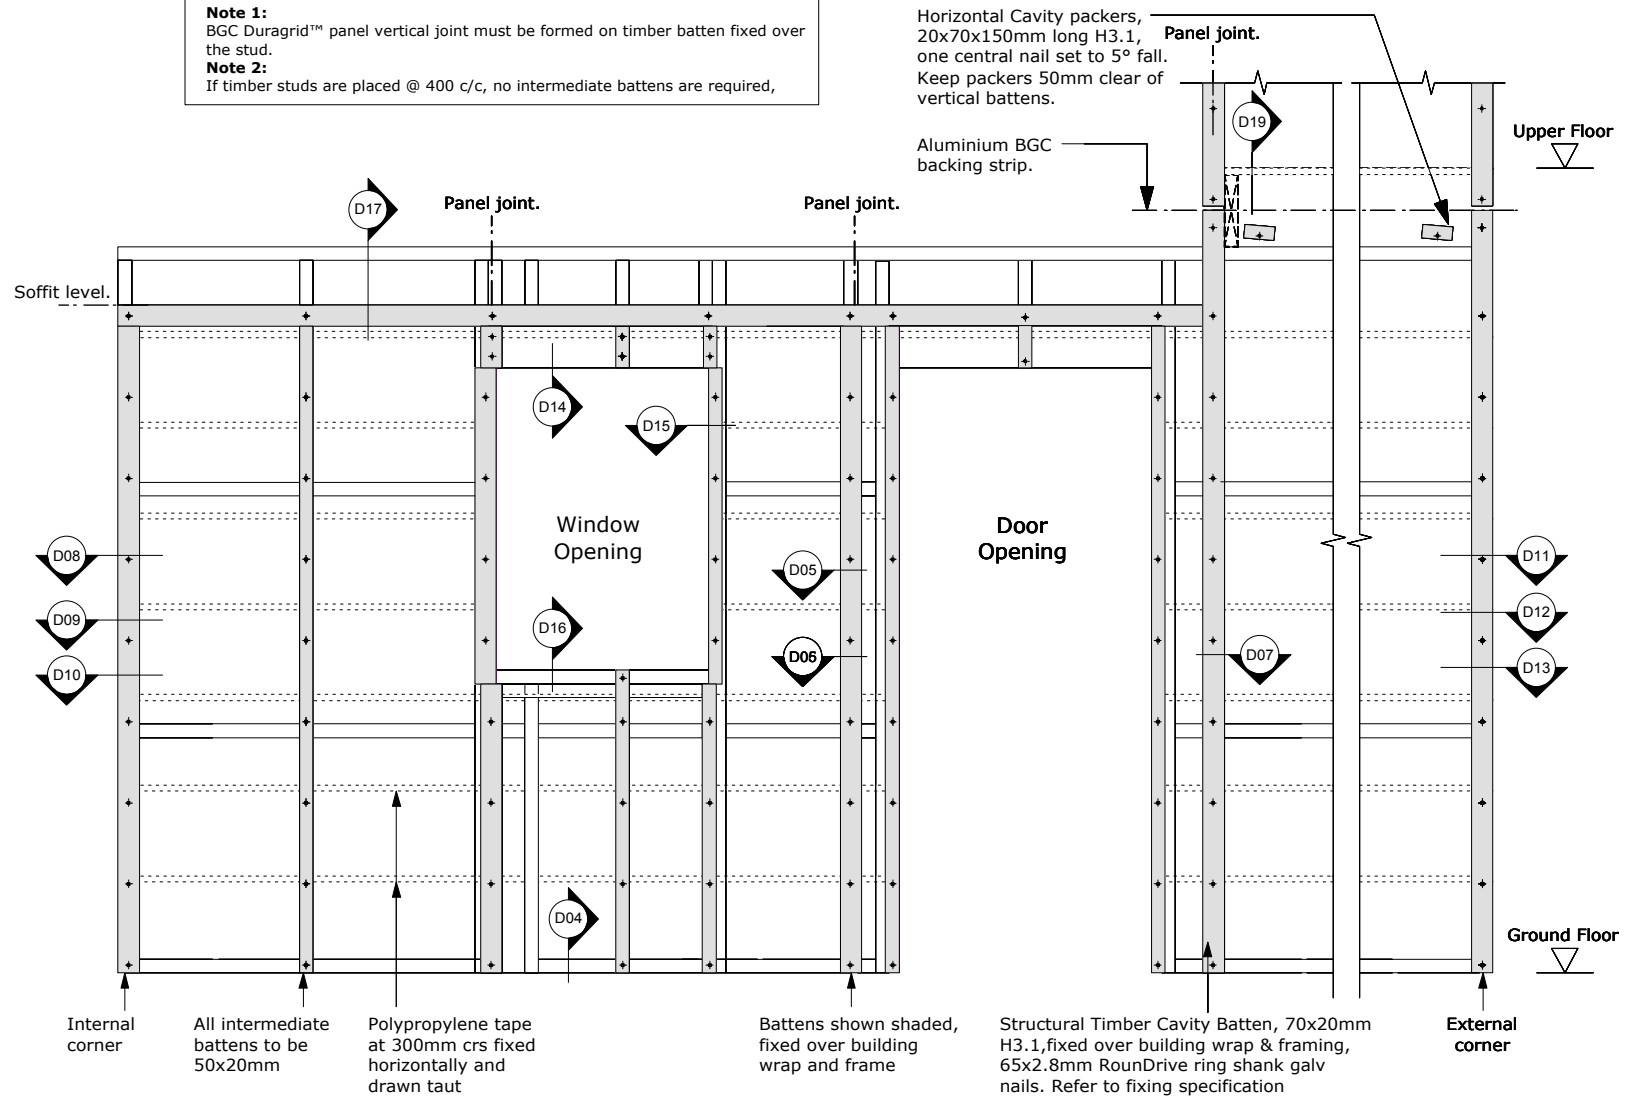

PROFILE BGC Duragrid™

DETAIL Framing Setout

DATE Nov 2011
SCALE 1:25 @ A4

DETAIL NO. D00