




## 609 Wiring Instructions. 75 Ohms Coaxial Cable TV-FM Splitter Antenna Socket

### NB: Fits 582VH, 584VH, 589VH plates

- 1 Fit module through plate aperture and snap in place.
- 2 Snap marked base to corresponding aperture.
- 3 Strip back outer casing 10mm from the end of the cable.
- 4 Roll braid or foil back over casing and strip core insulation back 5mm from the end of the cable.
- 5 Screw core wire to screw pillar and screw down braid with screws and saddle clamp provided.

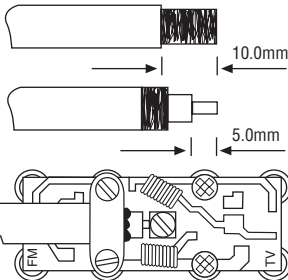

**PDL**

New Zealand Head Office:  
PO Box 15 355, New Lynn,  
Waitakere 0640, New Zealand  
Telephone +64-9-829 0490, Fax +64-9-829 0491  
[www.pdl.co.nz](http://www.pdl.co.nz)



**Electrical Products**

PDL Industries Australia Pty Ltd  
Locked Bag 5500, Baulkham Hills Business Centre  
Baulkham Hills NSW 2153 Australia  
Freephone 1300 735 266, Freefax 1300 735 329  
Telephone +61 29851 2666, Fax: +61 29851 2695  
[www.pdl.com.au](http://www.pdl.com.au)