

LEAVE TOP SECTION FREE FOR COVER TO CLIP INTO


APPLY FOAM IN THIS LOCATION

4 OFF WALL DOG SCREWS(SEE TABLE TO CONFIRM ACCEPTABLE FOR THE INSTALLATION).  
FOR FASTENING INTO WALLBOARD OR WOOD, NO PRE-DRILLING IS REQUIRED.  
CONCRETE GROUT-FILLED OR HOLLOW BLOCK, BRICK OR PLASTER REQUIRES A 1/8" PRE-DRILLED HOLE USING A CARBIDE DRILL BIT.

TEMPLATE FOR EXTERNALLY MOUNTED FANS

25mm HOLE  
ELECTRICAL CABLE  
LOCATION

276mm

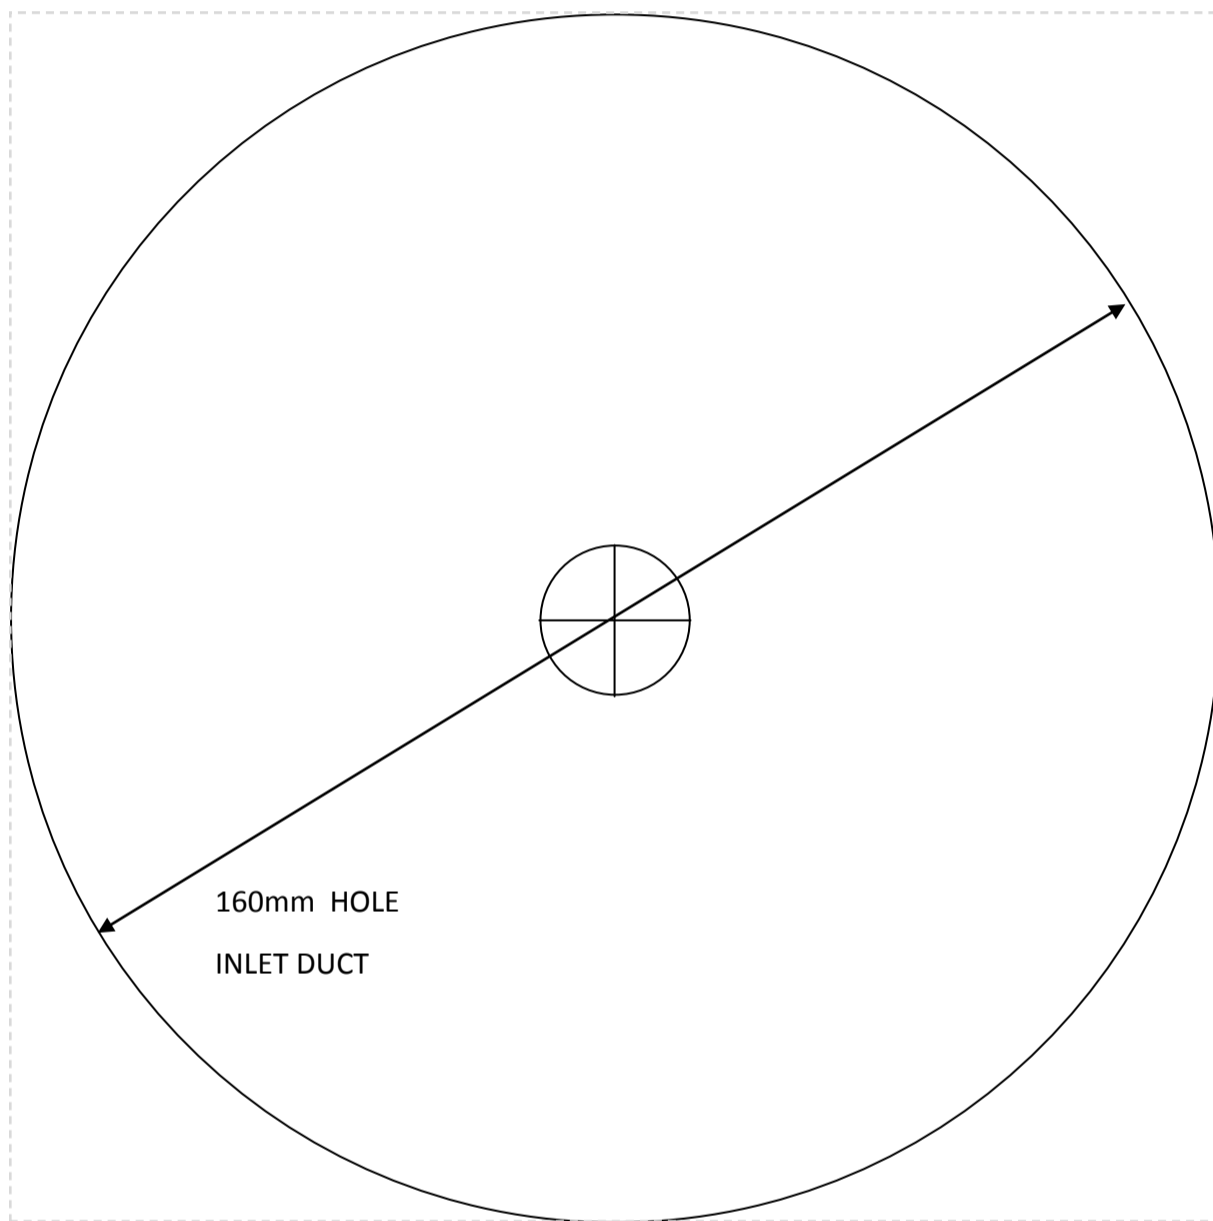

160mm HOLE  
INLET DUCT

160mm SQUARE HOLE  
INLET DUCT  
CAN ALSO BE USED

230mm

APPLY FOAM IN THIS LOCATION WITH JOINT AT THE BOTTOM

ELECTRICAL WORK SHALL ONLY BE CARRIED OUT BY A REGISTERED ELECTRICIAN.  
ALL BUILDING WORK MUST BE DONE IN ACCORDANCE WITH LOCAL AND NATIONAL  
BUILDING CODES AS APPLICABLE.  
APPLY A NEUTRAL CURE SILICONE SEALANT, SEAL THE FOAM FROM THE OUTSIDE  
OF THE COVER AND BASE.  
ENSURE THE INSTALLATION IS WATER TIGHT.  
IF IN DOUBT CHECK WITH THE LOCAL COUNCIL.

MIN AREA OF 200mm TO BE LEFT FOR MAXIMUM AIR FLOW

