


Metal angle to be continuous around meter box. Seal and rivet in place.

Seal the cladding against the metal angle

Airseal around all sides of meter box

Metal meter box

Continue building underlay / RAB<sup>®</sup> Board around framing

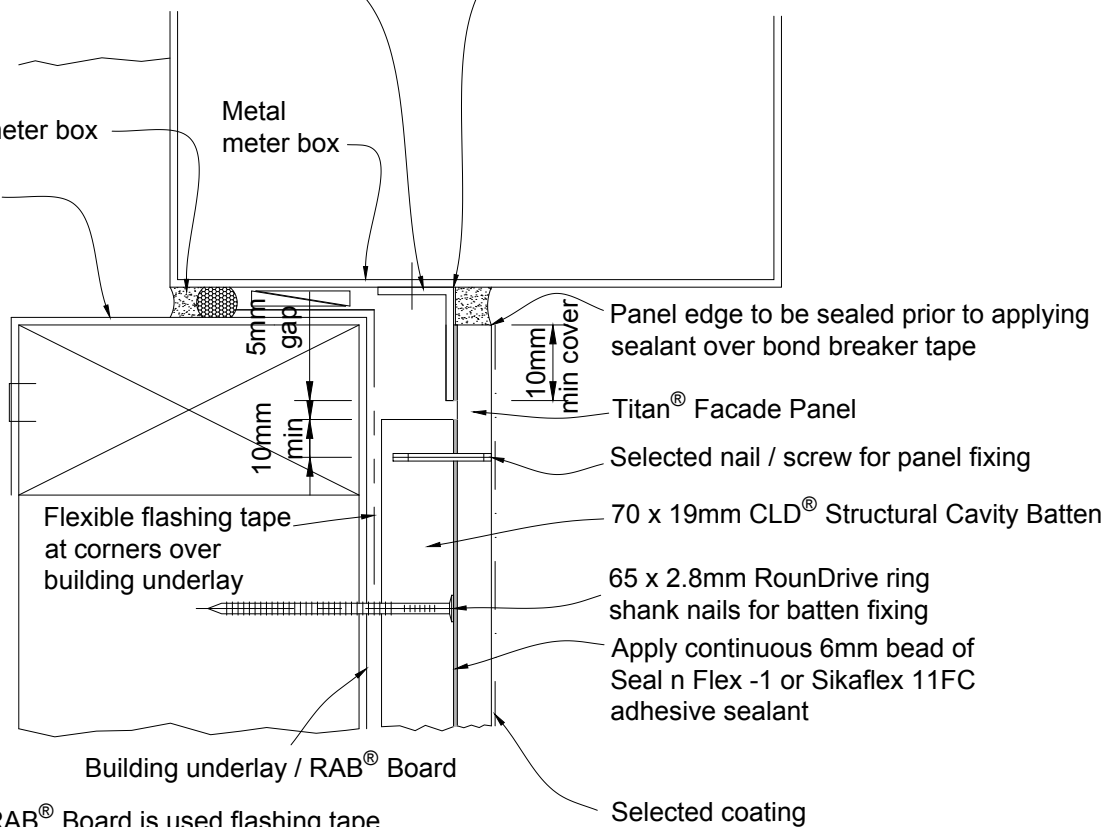

**Note:** When RAB<sup>®</sup> Board is used flashing tape to be applied to the entire window opening

