





# PANORAMA

PVC LINING SYSTEM

## INSTALLATION INSTRUCTIONS

### STORAGE

Store on a flat surface the whole length, wrapped in its original packaging away from direct sunlight.

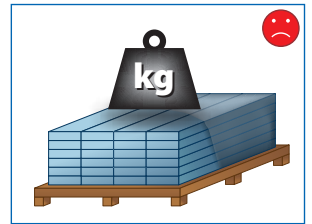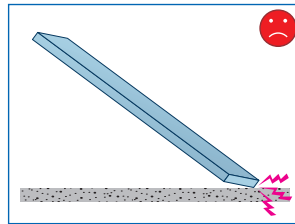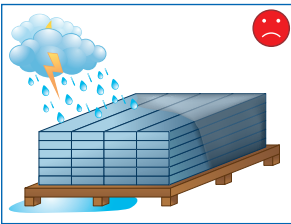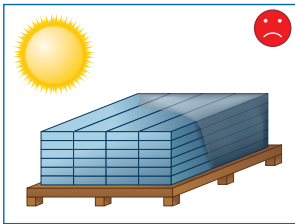

### CUTTING TOOLS



Circular saw



Jig saw



Manual Hack saw


### FRAMING

Panels must be attached to timber or steel framing which comply with construction standards (Fig A & B).




# INSTALLATION STEPS


**1** Attach the edge profile (13106) on the periphery of the surface to be covered (one screw every 20cm).

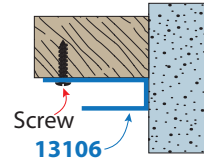



**2** Cut the panels (13101 or 13102) to suit distance between edges leaving a small gap at the edge. This gap allows proper insertion of the panels between edges or joiners and also allows a slight expansion of the panels.

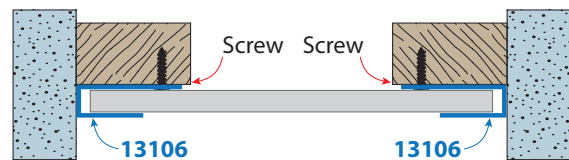


**3** Attach the panel on each support with a screw on the edge side.

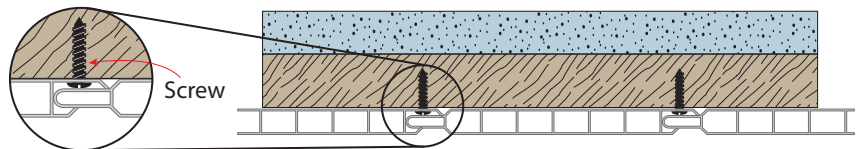



**4** Use the finishing profiles (ref. 13103, 13104 and 13105) for corners and edges or where a joiner may be useful as a dismantling access point or as a ventilation point.

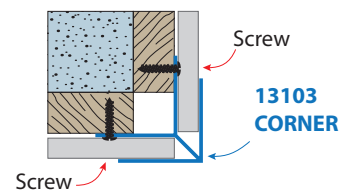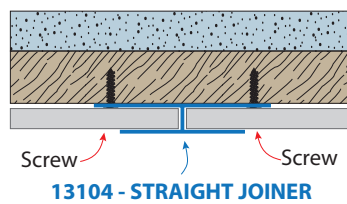

**13105 V-SHAPED JOINER**

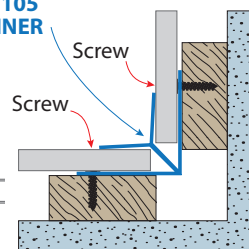

**13105 V-SHAPED JOINER**

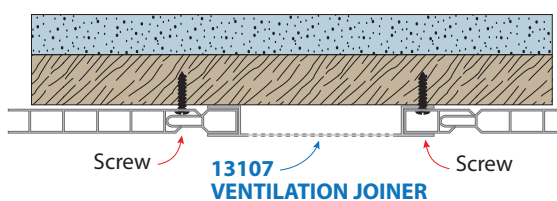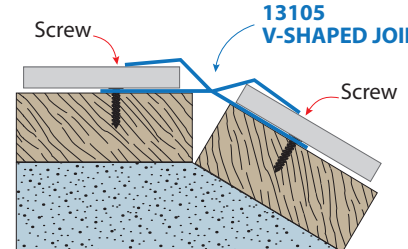

**13107 VENTILATION JOINER**

