



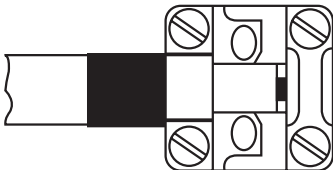

629M Wiring Instructions. 75 Ohms Coaxial Cable FM Antenna Socket.

- 1 Snap 629M module to required plate.
- 2 Strip back outer casing 15mm from the end of the cable.
- 3 Roll braiding or foil back over casing and strip core insulation back 8mm from the end of the cable.
- 4 Loosen off core clamp and screen clamp and feed core wire under core clamp, then tighten both core wire and screen by their respective clamps.



P D L

brand of
Schneider
Electric