


SKU: QU-IDY

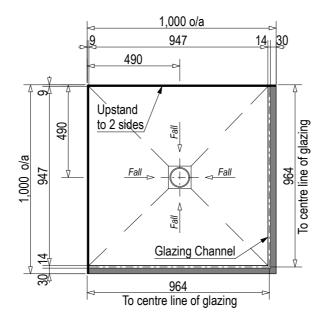

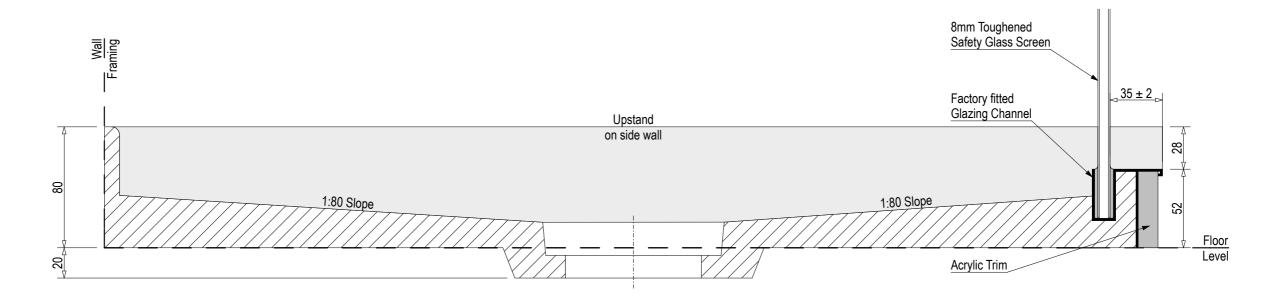

Note: Verify exact shower base dimensions on site


Screen Options:

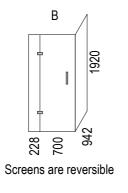


For installation instructions go to:

www.atlantis.co.nz/trade/installation/



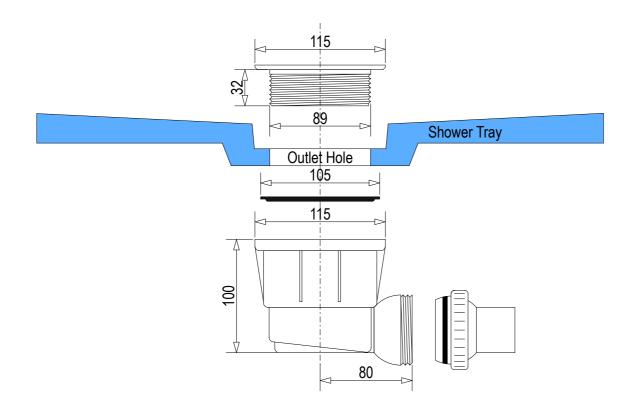

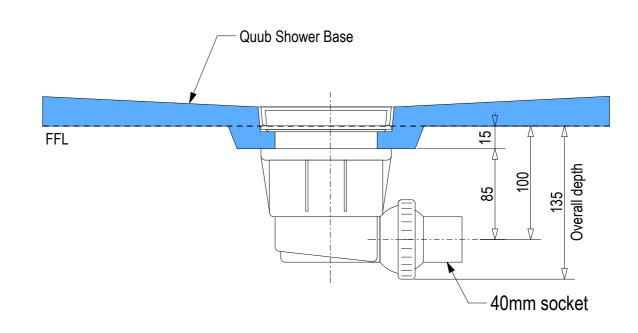

Ensure a minimum recess size of 250mm wide x 250mm long x 150mm deep for the channel drain and waste outlet





