



# 618M BT INSTALLATION

## CAT 618M BT SECONDARY TELEPHONE JACK MODULE


Read these instructions before you start and then follow them in the correct sequence.

### WARNING

In accordance with the Electricity Regulations and AS/NZS 3112, clause 3.2, these jackpoint modules must NOT be fitted in the same faceplate as any 230V modules, sockets/outlets or switches.

This module is suitable for fitting to any 500/600 Series switch plate. As many as six modules per plate may be fitted.


- 1 Select position for installation and fit either a deep mounting block, mounting bracket or 144 flush box.
- 2 Bring cable out and through the aperture of the switch plate you may wish to use.
- 3 Strip the outer sheathing of the cable 50mm and fit the wires as follows

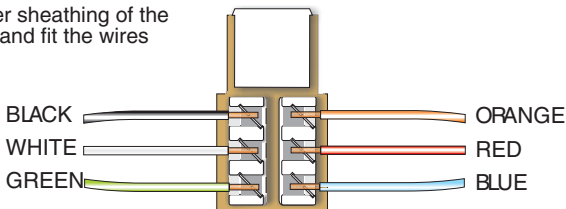

- 4 Support the module underneath the IDC (insulation displacement connector) terminals and fit the wires to their correct number as marked next to the terminal slots. Fitting of the wire is by using the 500TT IDC tool; pushing the wires down into their correct slot and then trimming the excess off.

Fig One.

*Fit the wires to their correct number as marked next to the terminal slots*

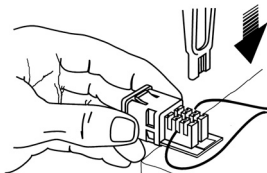

*Fit the wire by using the 500TT tool, pushing the wires down into their correct slot*

N.B. No more than two sets of cable may be fitted to any one module.

- 5 The module must be snapped into the plate so that the gravity door can close by dropping downwards.
- 6 The plate is then screwed into position

### WARRANTY

This unit has a 12 month warranty period, providing it is installed correctly to instructions.



# PDL

New Zealand Head Office: PO Box 15 355, New Lynn, Waitakere 0640, New Zealand  
Telephone +64-9-829 0490, Fax +64-9-829 0491  
www.pdl.co.nz



# Electrical Products

PDL Industries Australia Pty Ltd  
Locked Bag 5500, Baulkham Hills Business Centre  
Baulkham Hills NSW 2153 Australia  
Freephone 1300 735 266, Freefax 1300 735 329  
Telephone +61 29851 2666, Fax: +61 29851 2695  
www.pdl.com.au

