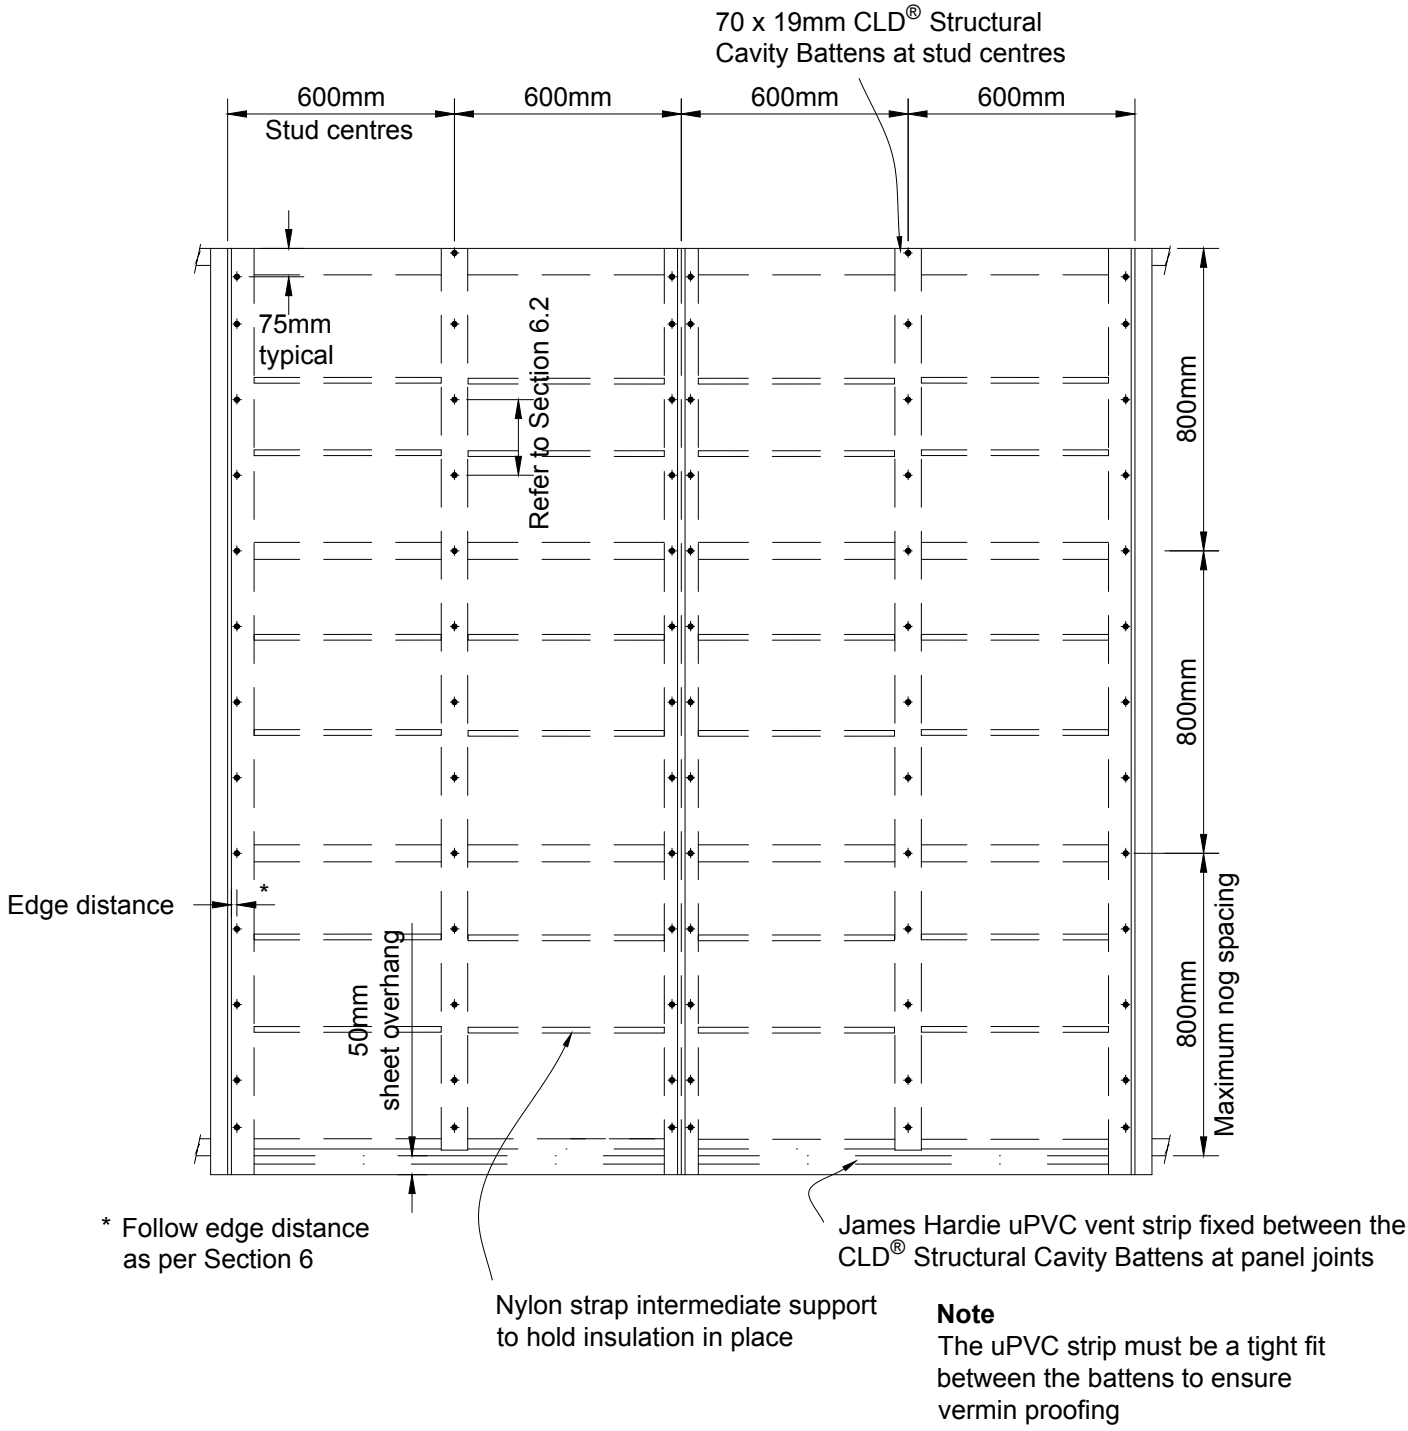

Note
The uPVC strip must be a tight fit between the battens to ensure vermin proofing